

# CPS-EP2000 2000W Power Supply scalable

19" embedded 2U/3U or hardmount in all positions, PFC 0,99



### Features:

- Optional LAN interface plug & play
- 3D Heat Dissipation
- CSB Current Share Bus paralleling 7 units
- · Inhibit for safe interlocking
- Remote Shutdown
- Sense mode
- Current Monitoring 0-5V
- Power Good Relay DC-ok

- Precise dynamics on load change
- Series & parallel operation up to 100kW
- EMC conducted class B, radiated class A
- Efficiency 92-94%
- PFC Powerfactor 0.99
- Variable controlled fans from Papst
- · Long lifetime under hard operation
- Solid 2U and 3U subframes available

Model	Voltage	Voltage setting	Current
CPS-EP2000.024	24Vdc	24 – 30Vdc	84A
CPS-EP2000.036	36Vdc	30 – 45Vdc	56A
CPS-EP2000.048	48Vdc	45 – 58Vdc	42A
CPS-EP2000.072	72Vdc	58 – 90Vdc	28A
CPS-EP2000.110	110Vdc	90 – 150Vdc	18,2A









#### Technical description - a unique mechanical concept

The Camtec CPS-EP models are high-precision industrial power supplies "Made in Germany". These power supplies are designed for scalable power systems.

For more than 25 years the Camtec Power Supplies manufactures high-end switch mode power supplies in Germany. A field breakdown of below 0,004% over a 10-year period under review approves our ambitious quality concept. Each manufactured Camtec product passes several 100% random tests for each detailed function and a full-load Burn-In test.

Although it is not required from the safety norms our production applies a routine safety test to each manufactured device, even if it is an extra low-voltage model. The components in the assembled device pass stress aging to achieve an even level and to prevent from delayed failures. Our internal product engineering guidelines provide a clear target: Camtec product reputation must say "mount and forget". Quality is never a mere promise for our team.

The CPS-EP is the value product that 100% basis on the CPS-EX series. The CPS-EP power supplies provide low noise & ripple and a precise setting at high load changes. With an efficiency of 92-94% and a power factor of 0.99, the devices are highly energy efficient.

Equipped with high-end capacitors of outstanding lifetime our power supplies guarantee a very long and reliable operation time. The circuit design of the CPS-EP Series allows cope playing with complex loads. The internal protection circuits protect the power supply and the connected system, even in exceptional situations. The CPS-EP series is protected from high transients by strong filters with high energy efficiency. All inputs and outputs and the interface are electrically isolated. The design specifications call for the highest standards of safety and interference suppression. The device was developed in accordance with the requirements of EN61010-1, EN61010-2-201, EN62368-1 and the EMC standards EN55032 conducted Class B, radiated Class A.

# The mechanical design of the CPS-EP2000 device series is unique. It is the first power supply line in the world market, which can be flexibly adapted to any installation situation.

The forced air-cooling system with monitored and load-dependent variable fan control, allows a detached position in the system. By simple and cost-effective wall brackets the device can be integrated in any position in 90° increments. Unlike comparable power supplies Camtec comes here for the first time to let the system integrator completely free hand. The cooling concepts for supply and exhaust air can be designed to completely remove the heat dissipation from the cabinet. Complex and expensive air-conditionings for switch cabinets can be reduced to a minimum or even eliminate. Brackets for air channels are available as an option. In selecting the fan, as with all our power supplies, in our opinion we use with the German manufacturer EBM Papst the highest quality and most reliable devices in the world market.

The installation of the power supply in a 19" subrack is guaranteed in the simplest way. Again, our engineers have decided to offer a completely open and flexible system. The optional front panels allow the power supplies the use in either a 2U or 3U subrack. In this way we can realized 6kW in 2U-rack and up to 10kW in a 3U-rack with the CPS-EP2000 models. With Zero-Stacking the series allows scalable high-power DC source in a comparable small 19-inch rack unit. For power applications with high dynamic range above 10kW we recommend contacting our support team.

As accessories for the CPS-EP Camtec provides matched 19 "subframes. Our subracks deserve the name of a carrier, because they really are extremely stable made of stainless steel. The power supplies have nickel-plated steel pins to position the power supplies in the subframes. The so married together systems withstand the toughest conditions. All mechanical connections in the power supplies or on the racks are constructed with A2 or nickel-plated screws, so that they provide maximum protection against corrosion and conductivity.

The optional DIGI3201 LAN interface can be exchanged in the field by the customer. The idea is to allow easy system upgrades from analogue to digital controls via plug & play configuration by the customer. Just fit the interface and it automatically calibrates to the power supply unit. Set an IP-address, define as the master or a slave and give it a name and you are done. This keeps service cost down and makes the power supply scalable to reuse in different system architecture.



### **Features**

#### Idling behavior

The CPS-EP Series is permanently open-circuit proof. When an output voltage is preset it comes stable. If a load is switched suddenly, the unit stabilized within <1ms. An overshoot of the output voltage is irrelevant.

#### Start behavior

The power supply has a start delay of 1s to stabilize all measuring circuits for the interface messages accurately. The power supply starts with a ramp (soft start) of 100ms. The output voltage does not overshoot-regardless of whether a load is connected or not.

#### Galvanic isolation and insulation

The switching power supply is galvanically isolated between the input and the output. All major digital inputs and outputs of the interface are electrically isolated.

#### Voltage set (Uadj)

The output voltage of the CPS-EP power supply can be adjusted by a potentiometer located at the rear of the unit. The current limit is fix. The power supply operates data stable even at all output voltages.

#### C Monitor (Imon)

The power supply provides real-time monitoring of the output current. It is the exact and real value at the output terminals. The latency signal preset to the measured value is negligible since the control circuit is constructed completely analogously.

#### Potentiometer Internal Control (Uadj)

The power supply will be set with an internal potentiometer. It is located at the rear of the unit.

#### Sense Mode

The power supply has a sense mode to compensate for voltage drops of 2V per load line.

#### **Continuous Mode**

The unit operates in continuous mode. In the continuous mode, the power supply provides constant current mode in a continuous flow and no ticker-operation.

#### Current Share Bus (CS)

In parallel operation, the involved network components communicate with each other and share the total power evenly to each other.

#### Remote Shutdown (SD)

All CPS-EP devices have a remote shutdown (open collector or switching contacts).

#### Inhibit Mode (Interlock)

The inhibit circuit reliably prevents unintentional starting of the power supply. The control loop is internally locked. Since this blocking is done progressively it is active even when the control signal, is missing due to a cable break or temporarily suspend. A premature restart of the power supply is prevented.

The inhibit input can be connected to a relay or switch. If the contact is interrupted, the power supply is switched off. If the contact is closed again, the power supply restarts

#### DC and AC Fail

By DC-fail the power supply reports that the power output is disabled. By AC-fail the power supply reports an AC undervoltage. Both signals have separate outputs. Each of them can be selected between NO and NC.

#### Over Voltage Protection (OVP)

Until the abolition of the fault the device switches off.

#### Over Current Protection (OCP)

The power supply provides continous current when it is overloaded. The voltage goes down to zero voltage.

#### Temperature Thermal Shutdown (OT)

The device has a thermal monitoring. When the temperature of the power supply is higher than the over temperature protection threshold, the unit shuts down and automatically restarts. An alarm signal is applied to the interface.

#### Fan Failure Monitoring (FF)

If it comes to a fan failure or blocking, a signal is applied to the interface. The speed signal of the fan is monitored. Thus, even a creeping fault is detected at an early stage and there is a warning long sold separately in front of a fan failure.

#### LAN Interface 12bit isolated (DIGI3201)

The standard equipment of the power supply is an analogue interface. Optionally, the unit can be equipped with a digital interface on request. The interface is being configured with a standard WEB-Browser.

#### 3D-HD (3D Heat Dissipation)

Our aligned and controlled heat dissipation design opens possibilities that are formerly being reserved to custom design power supplies: Steplessly hard mount of the CPS-EP2000/3000 power supply modules in a 3D-room.

In practice that means that one can mount the modules into every angle imaginable. Our 3D heat dissipation (3D-HD) ensures optimal cooling in each mounting position you may consider.

#### Design-to-Service:

Most recorded failures in the field concern the signal interface of a power supply. Camtec offers new concept of design-to-service that allows the customer easily to exchange the interface himself in the field. The analogue and digital interfaces apply plug & play self calibrating and can be used independent from the model CPS-i/EX/EP 2000 & 3000 Thus, system down cost is being reduced and only a small amount of spare parts need to be stocked by the customer.



<b>Technical Data Table</b>					
AC Input Range	184 - 264Vac				
AC Input Frequency	47 – 63Hz				
DC Input Range	250 – 375Vdc				
AC Input Rated	230Vac <10.0A				
DC Input Rated	250Vdc <9,3A 375V	250Vdc <9.3A 375Vdc <6.2A			
DC Voltage Rated	24Vdc	36Vdc	48Vdc	72Vdc	110Vdc
DC Voltage Setting Range	24 - 30Vdc	30 - 45Vdc	45 - 58Vdc	58 - 90Vdc	90 - 150Vdc
DC Current Rated	84A	56A	42A	28A	18,2A
Over Voltage Protection	35Vdc	52,5Vdc	68Vdc	105Vdc	175Vdc
Over Current Protection	85,7A	57,1A	42,8A	28,6A	18,6A
Ripple Noise 230Vac 20MHz	35mVpp	35mVpp	75mVpp	100mVpp	200mVpp
Power Rated	2000W, 184-264Vac		•		
Cooling	Continuously contr	olled and monitore	d fans from EBM	Papst (Germany)	
Efficiency	typ. 92-94% 230Vac	at full load			
Power Factor Control (PFC)	0,99 / 230Vac full lo	ad			
Short Circuit Resistance	ves				
Open Circuit Protected	ves				
Base Load (OCP)	Non required (open	circuit protected)			
Load Regulation	< ± 0.05% 0-100%	•			
Load Regulation Time	<1ms on load switc	h 10-100%			
Accuracy Imon	≤ ± 1%				
Temperature Control	yes, thermal shutdown & autorecovery (+65°C, outside measuring point distance 50mm)				
Hold Up Time	>30ms 230Vac mains buffering at full load				
Inrush Current	<14,6Aeff <20,7Apeak 230Vac active electronic inrush protection (no simple NTC)				
Startup Delay	typ. 1s				
Softstart	typ. 100ms				
Ambient Temperature	- 20°C+60°C operating, derating 2,5%/°C >50°C				
Storage Temperature	- 40°C+85°C				
<b>Ambient Conditions</b>	Humidity 95% non-	condensing @ 25°C	, climate class 3k	(3, pollution degree 2	
ROHS	2011/65/EU, (EU) 20	15/863 conform			
REACH	EG No. 1907/2006 c	onform			
EMI	EN55032, conducte	d .024/.036/.048 cla	ss B / .072/.110 cl	ass A, all models rad	iated class A
EMS/EMI	EN61000-6-2,3,4				
Safety	EN61010-1, EN6101	0-2-201, EN62368-1	, EN60950-1, EN6	0204-1	
Protection Class I	PE connection requ	iired			
Leakage Current	Typical 1.9mA, <2.8	mA, 230Vac 50Hz			
Isolation Input to Output	3000Vac				
Isolation Input to Case	2500Vac				
Isolation Output to Case	500Vdc , ≥48Vdc= 2	800Vdc			
MTBF (IEC61709)	419000h (Meantime	Between Failures:	statistic time bety	ween failures after rep	pairs)
MTTF (IEC61709)	146105h (Meantime	To Failure: statistic	time to ever fails	s)	
Dimensions (HxWxD)	84x126,4x444mm   3,3x5x17,5 Inch (without frontplate, note cable outlet in planning)				
Weight	4,4kg / 9,7lbs				
Input Power Connections	Neutrik NAC3FXXA-W-S (locked by bajonett) included				
<b>Output Power Connections</b>	Brass-Powerbars w	ith metric M8 threa	d, a touch protect	ion is included	

Output Ratings					
Model	24Vdc	36Vdc	48Vdc	72Vdc	110Vdc
Slew Rate 90-10%, 10/100% Load, [ms] typ.	70/7,0	30/3.0	46/4,6	35/3,5	47/4,7
Output Capacity, [mF] typ.	19,4	3,74	3,4	1,07	0,52




# **Manual und Technical Details**

Anai	og Interfac	e CON1 (	Connector Model Weidmueller 127	7320000 = included)	
Pin	Name	Туре	Function	Signal	Remarks
1	AC OK-1	Output	Closers, Signal AC OK	Relay	Potential-free
2	DC OK-1	Output	Closers, Signal DC OK	Relay	Potential-free
3	AC OK-2	Output	Center, Signal AC OK	Relay	Potential-free
4	DC OK-2	Output	Center, Signal DC OK	Relay	Potential-free
5	AC OK-3	Output	Break, Signal AC OK	Relay	Potential-free
6	DC OK-3	Output	Break, Signal DC OK	Relay	Potential-free
7	NC	NC	Not Connected	,	No Function
8	SD	Input	Control Signal Shutdown	Switch / Open Collector	
9	DGND	-	Digital Ground	-	
10	NC	NC	Not Connected		No Function
11	DGND	-	Digital Ground	-	Tio I dilotton
12	INH	Input	Control Signal Inhibit (Interlock)	Switch	
			Connector Model Weidmueller 127		
Pin	Name	Туре	Function	Signal	Remarks
1	DGND	Type	Digital Ground	-	
2	NC	NC	Not Connected		No Function
3	DGND	-	Digital Ground	-	rundudii
4	NC	NC	Not Connected		No Function
5	NC	NC	Not Connected		No Function
6	NC	NC	Not Connected Not Connected		No Function
7	FF	Output	Signal Fan Failure	Open Collector	NO FUNCTION
			Not Connected	Open Collector	No Function
8	NC	NC		0	No Function
9	OT	Output	Signal Over Temperature	Open Collector	N = 0
10	NC	NC	Not Connected		No Function
11	NC	NC	Not Connected		No Function
12	NC	NC	Not Connected		No Function
13	NC	NC	Not Connected		No Function
14	NC	NC	Not Connected		No Function
	og Interfac		Connector Model Weidmueller 127	· · · · · · · · · · · · · · · · · · ·	
Pin	Name	Type	Function	Signal	Remarks
			Analog Ground		
1	AGND	-	Analog Ground	-	
1 2	Imon	Output	Current Monitor	- 0-5Vdc / 5mA	
1	Imon NC	Output NC	_	0-5Vdc / 5mA	No Function
1 2	Imon NC NC	Output	Current Monitor		No Function No Function
1 2 3 4 5	Imon NC NC CS	Output NC NC I/O	Current Monitor Not Connected	0-5Vdc / 5mA  Parallel Operation	
1 2 3 4 5 6	Imon NC NC CS NC	Output NC NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected		No Function
1 2 3 4 5	Imon NC NC CS NC AGND	Output NC NC I/O NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB)		No Function Bidirectional
1 2 3 4 5 6	Imon NC NC CS NC	Output NC NC I/O	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected	Parallel Operation	No Function Bidirectional
1 2 3 4 5 6 7	Imon NC NC CS NC AGND	Output NC NC I/O NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground	Parallel Operation	No Function Bidirectional No Function
1 2 3 4 5 6 7	Imon NC NC CS NC AGND NC	Output NC NC I/O NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected	Parallel Operation	No Function Bidirectional No Function
1 2 3 4 5 6 7 8	Imon NC NC CS NC AGND NC AGND	Output NC NC I/O NC - NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground	Parallel Operation	No Function Bidirectional No Function No Function
1 2 3 4 5 6 7 8 9 10*	Imon NC NC CS NC AGND NC AGND NC	Output NC NC I/O NC - NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected	Parallel Operation	No Function Bidirectional No Function No Function No Function
1 2 3 4 5 6 7 8 9 10*	Imon NC NC CS NC AGND NC AGND NC AGND NC	Output NC NC I/O NC - NC - NC NC NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Not Connected	Parallel Operation	No Function Bidirectional No Function No Function No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12*	Imon NC NC CS NC AGND NC AGND NC AGND NC NC NC NC	Output NC NC I/O NC - NC - NC NC NC NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Not Connected Not Connected Not Connected	Parallel Operation -	No Function Bidirectional No Function No Function No Function No Function No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13	Imon NC NC CS NC AGND NC AGND NC AGND NC NC NC NC NC NC NC	Output NC NC I/O NC - NC - NC NC NC NC NC NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB)	Parallel Operation -	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional
1 2 3 4 5 6 7 8 9 10* 11 12* 13	Imon NC NC CS NC AGND NC AGND NC AGND NC CS NC NC NC NC NC	Output NC NC I/O NC - NC - NC NC NC NC NC NC NC NC NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected	Parallel Operation Parallel Operation	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16	Imon NC NC CS NC AGND NC AGND NC AGND NC	Output NC NC I/O NC - NC - NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected	Parallel Operation  Parallel Operation -	No Function Bidirectional No Function  No Function  No Function No Function No Function Bidirectional No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal	Imon NC NC CS NC AGND NC AGND NC CS NC AGND NC NC NC OS NC OS NC OS	Output NC NC NC I/O NC - NC C C C C C C C C C C C C C C C C C C C	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Connected Connected Connected Connected Connected Connected Connected Connecter Model Weidmueller 12	Parallel Operation  - Parallel Operation - Parallel Operation -	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC OGE Interfa Name	Output NC NC NC I/O NC - NC NC NC NC NC NC NC TO NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB)	Parallel Operation  Parallel Operation 277290000 = included) Signal	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal Pin	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC NC CS NC AGND NC Oge Interfa Name Sense -	Output NC NC NC I/O NC - NC NC NC NC NC NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Some Connected Connected Connected Connected Connected Connected Connector Model Weidmueller 12 Function Sense Connection	Parallel Operation  Parallel Operation - 277290000 = included) Signal -	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal Pin 1	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC OGE Interfa Name	Output NC NC NC I/O NC - NC NC NC NC NC NC NC TO NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Connected Sense Connection Sense Connection	Parallel Operation  Parallel Operation 277290000 = included) Signal	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function Remarks 2V / load line
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal Pin 1 2 3, 4	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC NC CS NC AGND NC Oge Interfa Name Sense -	Output NC NC NC I/O NC - NC NC NC NC NC NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Connected Analog Ground Not Connected Sense Connection Sense Connection Sense Connection NC	Parallel Operation  Parallel Operation - 277290000 = included) Signal -	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal Pin 1 2 3, 4 5, 6	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC AGND NC SO NC AGND NC SO	Output NC NC NC I/O NC - NC NC NC NC NC NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected	Parallel Operation  Parallel Operation - 277290000 = included) Signal -	No Function Bidirectional No Function  No Function  No Function No Function No Function Bidirectional No Function No Function  Vo Function  Remarks 2V / load line  Must not be connected
1 2 3 4 5 6 7 8 9 10* 11 12* 13 14 15 16 Anal Pin 1 2 3, 4	Imon NC NC CS NC AGND NC AGND NC NC NC NC NC NC NC CS NC AGND NC Oge Interfa Name Sense -	Output NC NC NC I/O NC - NC NC NC NC NC NC TO NC	Current Monitor Not Connected Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Analog Ground Not Connected Not Connected Not Connected Current Share Bus (CSB) Not Connected Current Share Bus (CSB) Not Connected Analog Ground Not Connected Connected Analog Ground Not Connected Sense Connection Sense Connection Sense Connection NC	Parallel Operation  Parallel Operation - 277290000 = included) Signal -	No Function Bidirectional No Function No Function No Function No Function No Function Bidirectional No Function No Function Remarks 2V / load line




### Schematic of the internal circuits CON1 - 4

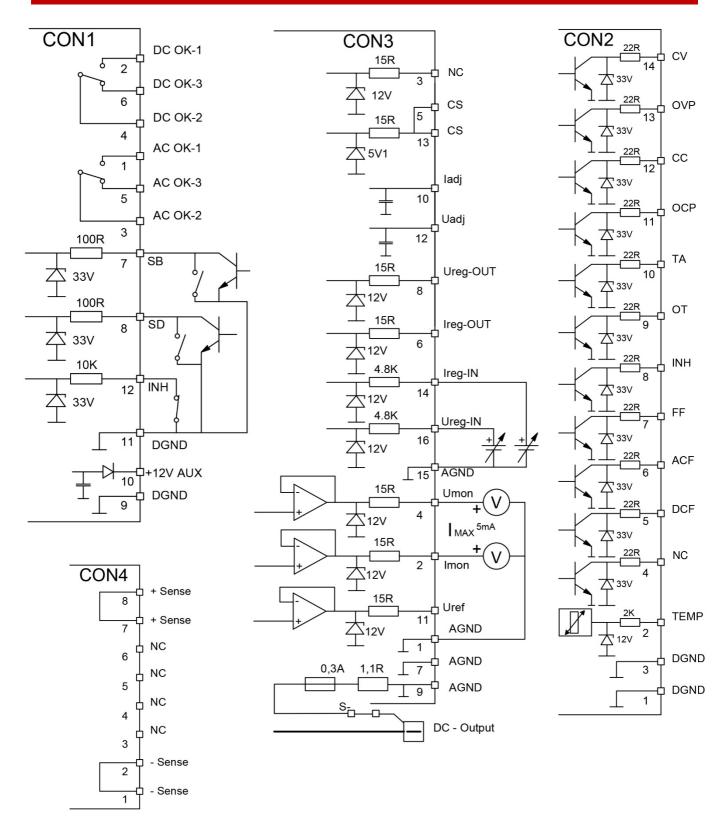



- Interface pluggable Push-Pull-Connectors from Weidmueller (included)
- Input Power Connector Neutrik NAC3FXXA-W-S (included)
- Output Power Connection M8 Powerbars
- Lock-Pins snap into the 2U/3U 19" subrack

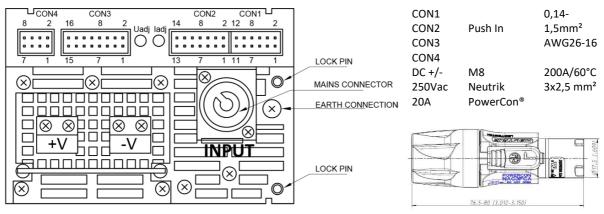

**Neutrik NAC3FXXA-W-S** 

### **WARNING OUTPUT CONNECTION INSTRUCTION:**

Mount the cable lugs directly on the output terminals followed by a washer, a split washer, and a screw. Failure to follow the order can result in excessive heat! Recommended torque: 8-10Nm. Use only screws, washers and split washers supplied with this unit.

NEUTRIK ASSEMBLY INSTRUCTION FOR NAC3FXXA-W-S follow below external link or type into your browser: https://www.neutrik.com/en/product/nac3fxxa-w-s

(please note that Camtec is not responsible for external content)



LED Oper	ating Signal		
CV/OVP	CV Constant Voltage Mode LED lights Green	U	GRN/RED
	OVP Overvoltage maloperation or interference voltage LED lights Red		- CV/OVP
CC/OCP	CC Constant Current Mode LED lights Yellow (1)		CC/OCP
	OCP Over Current Protection LED lights Red		– TA/OT
TA/OT	TA Temperature Alarm LED lights Yellow, warning temperature shutdown pending (1)		
	OT Over Temperature Shutdown LED lights Red		- INH/FF
INH/FF	INH Inhibit (Interlock) Shutdown LED lights Yellow		- SD/SB
	FF Fan Failure LED lights Red		0
SD/SB	SD Shutdown LED lights Yellow		YEL/RED
	SB Standby LED lights Red (1)		

(1) Not available for EP-series

Configuration of the Current Share Bus (CS)				
Mode	S11	S12		
CS active	0			
CS non-active	1			

Warning! CS (Current Share Mode) only applies when a current distribution must take place while parallel operation mode. In single or parallel operation without the need of CS, always switch CS with S11 to OFF=1. Factory set: CS non-active (S11=1)




### Compensation of Load Line Drop Voltage (Sense ++/--), standard operation mode

The CPS-EP power supply has a Sense Mode to compensate for the voltage drop over long load lines. The compensation amounts to a maximum of 2V per load line. Under certain circumstances, it can be expected to apply more complicated external interference suppression. If sense is not used, CON4 Sense +/+ and Sense -/-shall necessarily be connected by short bridges to the power outputs (factory setup).


Sense operation: Remove the bridges between Sense +/+, Sense -/- and the power outputs. Connect the sense lines directly to the load. It is irrelevant which of the local connections Sense +/+ and Sense -/- are applied. Pay attention to the polarity of plus and minus of the load to prevent damage to the power supply. To avoid interference, twist the sense lines. To reduce inductive effects, we recommend that the load lines position is close to each other. To supply a pulsating load, the use of an electrolytic capacitor and a cermic capacitor has proved. The internal Over Voltage Protection (OVP) of the power supply controls the DC power directly to the DC output terminals. In case of an error the OVP acts automatically (see OVP values corresponding table).

Operating in the sense mode requires that the maximum output voltage will not be exceeded. Maximum 2V per load lead can be compensated. The voltage drop in the load lines decreases the maximum output voltage rating. Example of a 30V unit: if the total voltage drop in the load leads is 2V you must subtract this value from the maximum programmable output voltage 30V - 2V = 28V maximum available voltage at the load.

The sense terminals are directly connected to the power outputs.



Lokal Sensing (factory setup)



Remote Sensing (twisted sense lines)


WARNING! PROTECT TO MIX UP SENSE CONNECTIONS. THIS COULD CAUSE SERIOUS DAMAGE TO THE DEVICE.




### Compensation of Load Line Drop Voltage (Sense ++/--) battery charger operation mode

#### Remote Sensing as a battery charger

If the CPS-EP power supply unit is used as a battery charger, it is recommended to refrain from sensing. It can lead to severe damage to the power supply, if the polarity of the sense line is confused (field experience: such error often occurs when system service is required, e.g., when the batteries are changed). If it is necessary to use sensing, proceed as described in the figure below. Proven approaches are 250mA for the fuses and 3...5A load capacity of diodes.

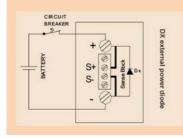

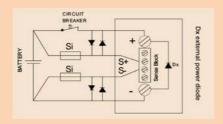

### Current Distribution in Parallel Mode (CS), CSB Current Share Bus

To increase the output current, up to 5 units of the same model and output voltage can be operated in parallel. The operator shall ensure that the output voltage of each involved unit shall be set to the same value and with a maximum tolerance of  $\pm 0,5\%$ . Derate the total output current by 5% to prevent the unit from overload operation. In parallel operation, a uniform current distribution between the participating power supplies is important. To prevent one of the power supplies going early into the current limitation and display error message. An uneven load and thus premature aging of the participating devices is prevented. (further information on page 12) Connect CON3 contact 5 (CS) to contact 13 of the next device. Are other devices involved in the parallel operation, you may grind the CS bus through from unit to unit. The current division between the devices will be performed automatically. The accuracy of the current distribution is  $\pm 5\%$  at  $I_{out} \ge 0,5x I_{out}$  max. Set the DIP switch S11 to the OFF position if you like to apply CS-mode operation. The factory set of the DIP switch S11 is ON (no CS operation).

#### **External Shutdown (SD)**

The power supply is set to the Shutdown mode, when the control input is either shorted via a relay contact, a switch contact or an NPN transistor with open collector (voltage drop <1V, current typ. 1,5mA). Alternatively, a voltage of 10 to 30V (typ. 12V/1.5mA, 24V/5.5mA) can be applied.

If the shutdown repeals the power supply starts with a delay of 35ms.

Using the softstart the current and the voltage rises within 100ms continuously to the default set values. Between control input SD, power input, and power output is a reinforced Isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.



### Set Voltage Range via Potentiometer (Uadj)

The power supply is equipped with 1 potentiometer Uadi for setting the voltage. The current limiting is fix.

### **Continuous Mode Operation Device**

The device provides continuous current while overloaded and the voltage goes down.




### **Over Load Behaviour**

The CPS-EP changes from the standard operation mode into the high current mode when high and quick overload occurs. Thus, it provokes a restart after a 30ms break and delivers continuous current to the output. This special behaviour is a protection for the power supply and for the connected load.

#### Inhibit / Interlock (INH)

The power supply is equipped with a control input Inhibit (INH) to interlock a DC-shutdown of the power supply.

For the nominal operation of the power supply the connections of the control input "INH" must always be short-circuited. The power output is switched off as soon as the connection between the contacts of the control input INH is interrupted. If Inhibit is repealed, the power supply starts with a delay of 35ms. Using the softstart the current and the voltage rises within 100ms continuously to the default set values. Between the INH contacts applies a current of typical 2mA.

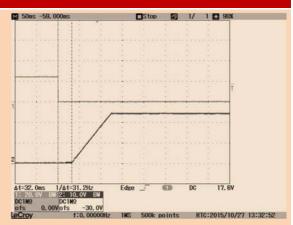

### ! Warning against damage in case of incorrect connection assignment

Never apply any external voltage to the control input INH. Never connect a resistor to the INH interface. The INH can only be connected to a floating contact (e.g., mechanical switch or relay). Between control input INH and power output is a reinforced Isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

### **DC-OK Relay (DC Power Good)**

The signal DC OK has potential-free relay contacts (changeover). The contacts of CON1 Pin2 and CON1 Pin4 are closed (relay coil is energized) when the power operates as a connstant voltage source. The contacts CON1 Pin2 and CON1 Pin4 are open when the power output is inhibited by SD, INH, OT, FF, OVP, OCP or a defective PFC. Contact load (resistive load): 30Vdc/1A, 60Vdc/0.3A, 30Vac/0.5A. Betwenn the intermediate relay contact and the power output is a reinforced Isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

### **AC-OK Relay (AC Power Good)**

The Power Good relay reports whether the input voltage is too low or missing. The notification signal AC OK is generated with potential-free relay contacts (changeover).

The contacts of CON1 Pin1 and CON1 Pin3 are closed (relay coil is energized) when the input voltage is higher than typ. 175Vac or 210Vdc (switch-on). The contacts of CON1 Pin5 and CON1 Pin3 are closed (relay coil is not energized) when the input voltage is lower than typical 165Vac or 145Vdc (turn-off). Contact load (resistive load): 30Vdc/1A, 60Vdc/0.3A, 30Vac/0.5A.

Between the relay contacts and the power output is a reinforced isolation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

#### Over Voltage Protection Signaling (OVP)

If an over-voltage occurs to the output (for example, defective components, external feed voltage), it is followed by the shutdown of the power output. A periodic restart attempts (ticker operation period 1s). The LED OVP lights red.

### **Over Temperature Shutdown (OT)**

The alarm signal OT is high when the temperature of the power supply is higher than the over-temperature protection threshold. Output Open Collector I<sub>MAX</sub>=10mA, V<sub>LOW</sub>≤0,6V, V<sub>MAX</sub>=30V.




### Fan Fail Signal (FF)

The power supply fans are continuously monitored. FF occurs when one or both fans have an error (lower speed due to bearing contamination, blockage, or failures). A failure message is sent: The status signal FF applies high. Output Open Collector I<sub>MAX</sub>=10mA, V<sub>LOW</sub>≤0,6V, V<sub>MAX</sub>=30V.

### LAN Interface DIGI3201 12 Bit (option)

The power supply can be operated via the DIGI3201 LAN interface. The interface can be easily configured using a standard WEB browser. It is therefore compatible with Windows-based software such as WinLab, LabView and others. The digital interface makes it possible to set up DC networks consisting of a master-master, slave-masters, and slaves power supply units. The LAN interfaces are networked via an external standard Ethernet switch (not included). All functions of the analogue interface are also available with the DIGI3201 interface. The DIGI3201 interface recognises the power supply unit itself and automatically calibrates itself to the device. We have found that most defects in a system power supply occur at the interface - whether due to overvoltage or defects in the control unit. When developing the interface, we therefore opted for a design-to-service approach. It is much cheaper to keep a new interface in stock as a spare part than a complete power supply. System downtimes are also reduced in the long term. Even less well-trained specialist personnel can replace the DIGI3201 or the analogue interface on site.

### Configuration with optional LAN interface

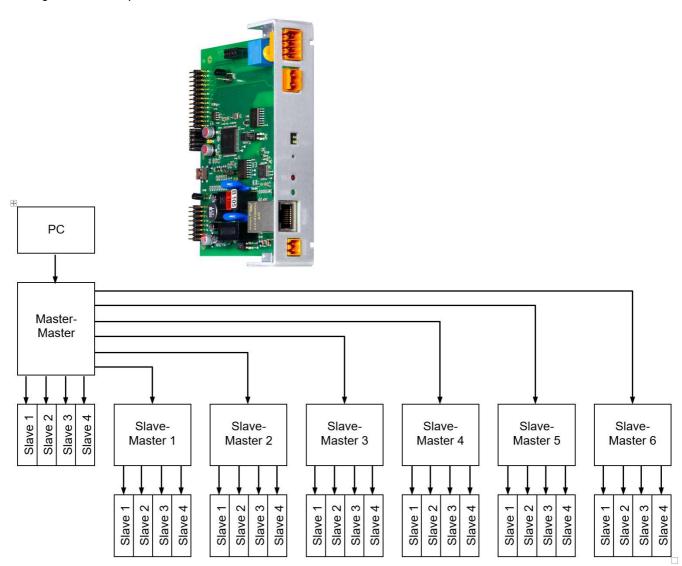




### **C/V Chart and Operating Point**

The output voltage set Vout is set with the potentiometer at the rear off he power supply.

The current limit is fix.

The system integrator must make sure that the nominal output power does not exceed below values to protect the unit from operating under overload conditions. (also see OT thermal SD)

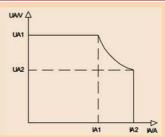



Model	Value UA1 (V)	Value IA1 (A)	Value UA2 (V)	Value IA2 (A)	Pmax (IA1/IA2)
CPS-EP2000.024	30Vdc	66,7A	24Vdc	84A	2001/2016W
CPS-EP2000.036	45Vdc	44,4A	36Vdc	56A	1998/2016W
CPS-EP2000.048	58Vdc	34,5A	48Vdc	42A	2001/2016W
CPS-EP2000.072	90Vdc	22,2A	72Vdc	28A	1998/2016W
CPS-EP2000.110	150Vdc	13,3A	110Vdc	18,2A	1995/2002W

### **Inrush Current Limiter (electronic)**

The power supply unit has an electronic current limiter  $(230 \text{Vac}=14,6 \text{A}_{rms}/20,7 \text{A}_{peak})$ .

It is a precisely working circuit instead of a usual simple NTC solution. The accuracy is ±10%, regardless of the operating temperature and the duty cycles (interval ≥10s). We recommend the smallest circuit breaker a characteristic B with 16A.




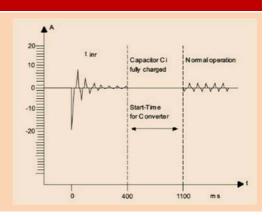

### **Temperature Monitoring & Derating**

The maximum ambient temperature during operation is + 60°C. If the overtemperature protection is activated, the power supply but not the fan is switched off.

The measuring point is 50mm outside the power supply at the front side (fan/blower input). The power supply unit starts automatically when it has cooled down.

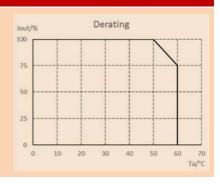




### **Open Collector Circuit Interface**

Between all open collector outputs and the power output is a reinforced Insulation of max. 400Vdc and a basic isolation of max. 600Vdc working voltage.

(Note: this applies to all signals from CON1 and CON2, regardless of whether they are designed as open collector, or not)

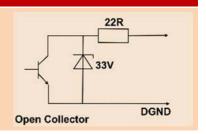


### **Series Operation**


Two or more units of the same model and output voltage can be operated up to a total voltage of 600Vdc in series (not applicable to EN62368-1). Due to the dielectric strength of the internal components used, only the models with an output voltage of 48Vdc and later are approved for series operation. Other power supplies are not approved for series operation above 60Vdc.

### Parallel Operation & N+1 Decoupling

To increase the overall power of the power supply, two or more devices of the same model with the same output voltage may be operated in parallel. When using the Current Share Bus, the number of devices is limited to 7 pcs. For performance applications with more than 7 devices that use the Current Share Bus, we recommend contacting our support team. For applications without the Current Share Bus, more than 7 devices can be operated in parallel. For power applications with a high dynamic range above 10kW, we recommend contacting our support team. We recommend using a busbar for the DC power connector. Make sure that the cable lengths and cable cross-sections of all power supplies to the busbar or to the star point are identical. Allow proper connection for low contact resistance. If you want to use the sensing function, connect it also to the star point or busbar. To avoid measurement errors, select the line length from the neutral point or from the busbar to the load as short as possible and use the maximum possible conductor cross-section. The CPS-EP models have no internal O-ring diode, to operate the devices N+1 redundant.

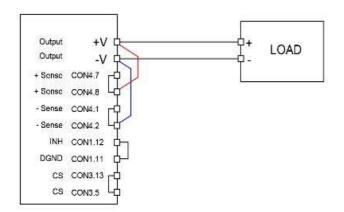


Configuration Standard Sense Mode

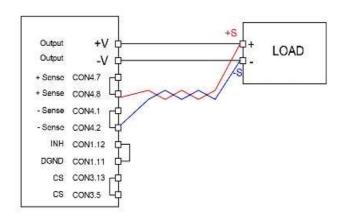


Configuration Remote Sense Mode



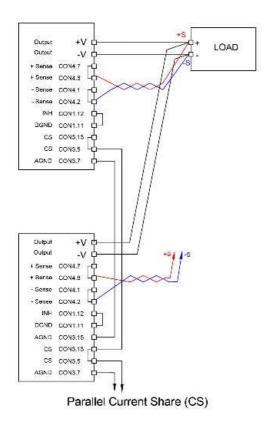


Output -V + Sense CON4.8 Sense CON4.1 Sense CON4.2 INH CON1.12 DGND CON1.11 CS CON3.13 LOAD Output -V + Sense CON4.7 + Sense CON4 B - Sense CON4.1 - Sense CON4.2 INH CON1.12 DGND CON1.11 CS CON3.5

Parallel Mode (No CS, Local Sense)

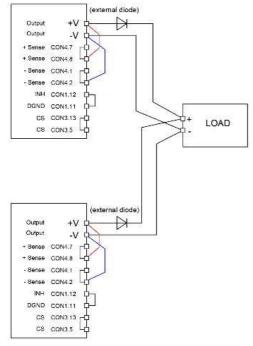



Parallel Decoupled Mode (No CS, Local Sense)

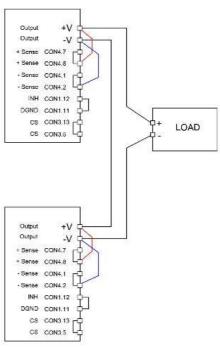


Serie Mode (No CS, Local Sense)



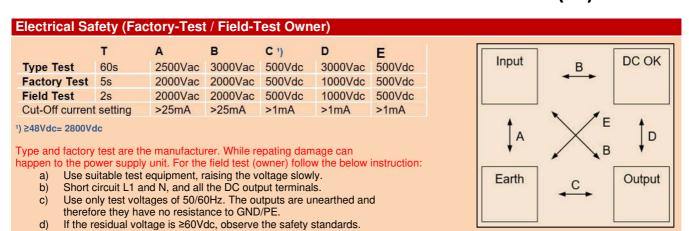

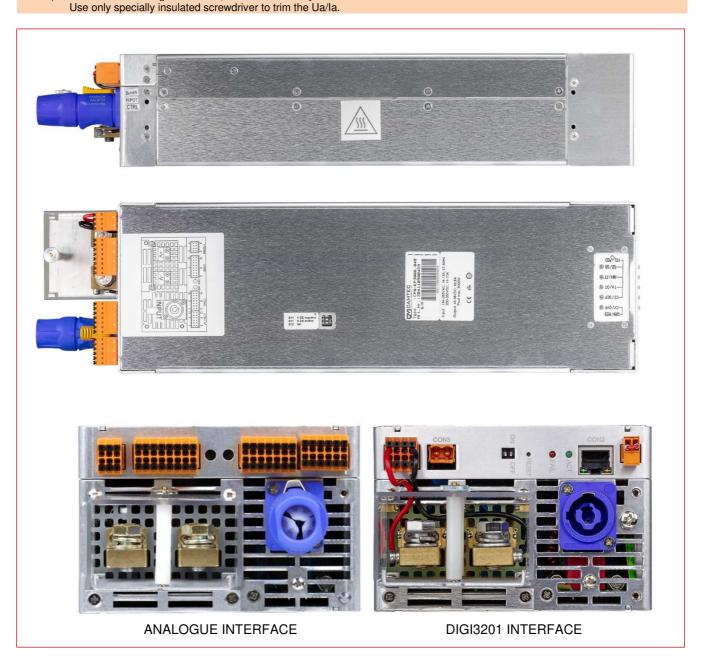



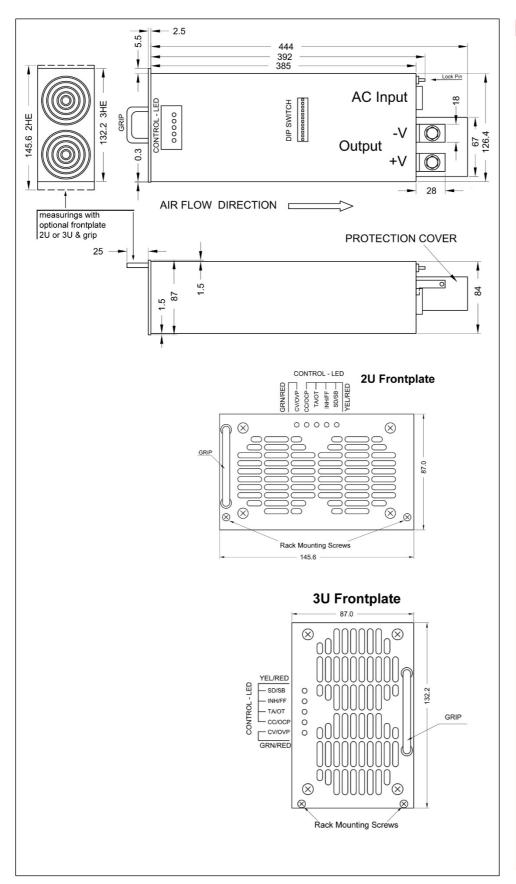

### **Mechanics**

Aluminium-housing IP20.

Cooling is achieved via front-to-rear fans.

To ensure adequate heat dissipation, 50mm to the front and 150mm blockade-free distance from the device back wall must be guaranteed.

The harnesses are to be designed and installed to that the air outlet of the unit is not being blocked.


In a rack mounting of multiple subracks, the rear distance of the cablemanagement increases, depending on the type of the air duct.


An optional cableaccession assistance for the racks will be available soon.




### 19"Subrack 2U & 3U

2U Subrack for 1-3 CPS-EP2000 with up to 6kW continuous power 3U Subrack for 1-5 CPS-EP2000 with up to 10kW continuous power

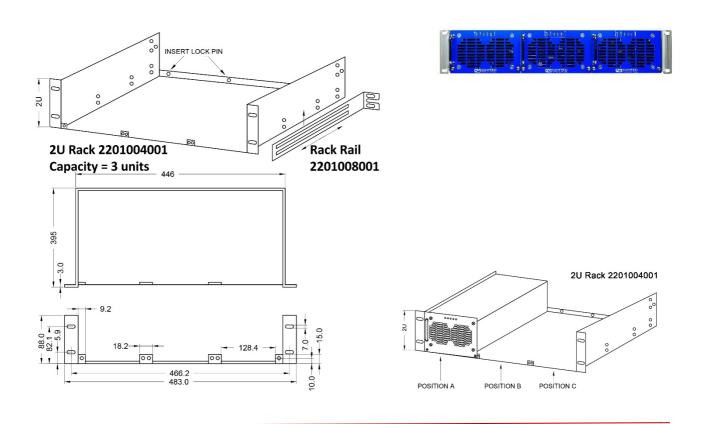

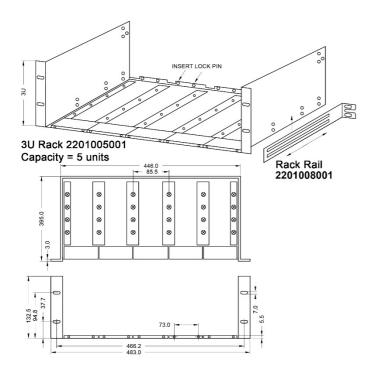



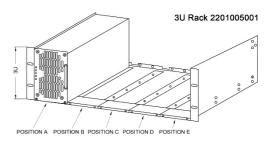




### Wall Mount Option & 3D Heat Dissipation (3D-HD)

Our aligned and controlled heat dissipation design opens possibilities that are formerly being reserved to custom design power supplies: Steplessly hard mount of the CPS-EP2000/3000 power supply modules in a 3D-room.

In practice that means that one can mount the modules into every angle imaginable. Our **3D H**eat **D**issipation (**3D-HD**) ensures optimal cooling in each mounting position you may consider.

All you may consider is to make sure, that at least a distance of 5cm (2 Inch) to the front cooling slots and 15cm (6 Inch) to the rear cooling openings are guaranteed to prevent from blocking the airflow. The cabling must also not block the heat dissipation.

When the CPS-EP2000/3000 is hard mounted the optional front plates cannot be used. The standard control LEDs allow visualization from any mounting position (see below drawing).

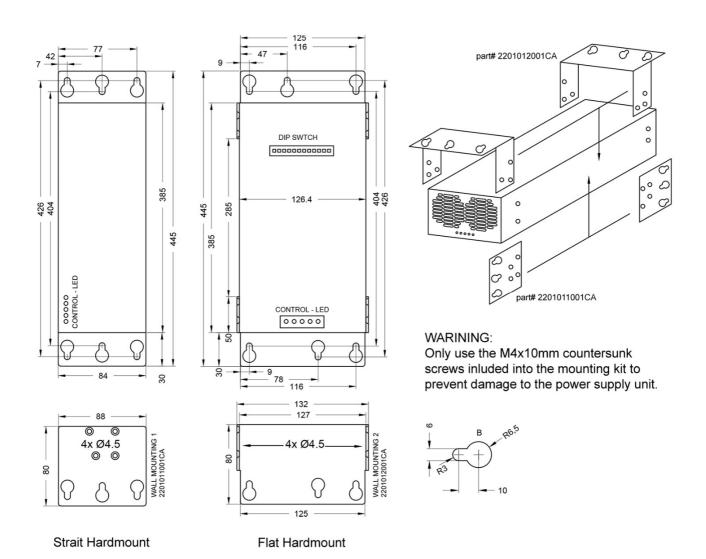



# **Available Options**

### Digital LAN Interface DIGI3201 12 Bit, 12 Bit (isolation 300/600Vdc)

The power supply can be operated via the DIGI3201 LAN interface. The interface can be easily configured using a standard WEB browser. It is therefore compatible with Windows-based software such as WinLab, LabView and others. For further information download DIGI3201 Manual. The interface has a reinforced isolation of max. 300Vdc and basic insulation of max. 600Vdc working voltage.

#### **Test Certificate and Calibration**

Optionally we offer with the delivery of a CPS power supply a Manufacturer's Inspection Certificate of electrical setpoint / actual values. The power supply then is "calibrated". Such Manufacturers Calibration Certificate for each power supply can uniquely be assigned via the device serial number.

A manufacturer calibration of a CPS-i can frequently be done via controlled recirculation on a regular basis. Please request the help of your local CPS dealer or contact us directly: service@camtec-gmbh.com

<b>Ordering</b>	Codes	
Product Code	Information	Article Number
CPS-EP2000.024(R2)	24Vdc model incl. analogue interface	3041101002CA
CPS-EP2000.036(R2)	36Vdc model incl. analogue interface	3041101003CA
CPS-EP2000.048(R2)	48Vdc model incl. analogue interface	3041101004CA
CPS-EP2000.072(R2)	72Vdc model incl. analogue interface	3041101005CA
CPS-EP2000.110(R2)	110Vdc model incl. analogue interface	3041101006CA
CPS-EP2000.024.DIGI(R2)	24Vdc model incl. digital interface LAN	3041101012CA
CPS-EP2000.036.DIGI(R2)	36Vdc model incl. digital interface LAN	3041101013CA
CPS-EP2000.048.DIGI(R2)	48Vdc model incl. digital interface LAN	3041101014CA
CPS-EP2000.072.DIGI(R2)	72Vdc model incl. digital interface LAN	3041101015CA
CPS-EP2000.110.DIGI(R2)	110Vdc model incl. digital interface LAN	3041101016CA
Digital Interface	DIGI3201-Interface card with 1 port LAN for aftermarket hardware upgrade	3021129001BT
Certifcate Calibration	Separate works certificate for manufacturer calibration of the power supply	4031107001CA
19" Front Plate Kit 2U	Including mounting material	2201006001CA
19" Front Plate Kit 3U	Including mounting material	2201007001CA
19" Blind Plate Kit 2U	Including mounting material	2201009001CA
19" Blind Plate Kit 3U	Including mounting material	2201010001CA
19" Subrack 2U	3 Modules mountable only in conjunction with front panel 2U orderable	2201004001CA
19" Subrack 3U	5 Modules mountable only in conjunction with front panel 3U orderable	2201005001CA
19" Rack-Rail Kit	2x Support Rails for rack mount, mounting kit included	2201008001CA
Wall Mount Kit	Bundle-kit fits a single power supply, includes fixing screws to the power supply	2201014001CA



Safety regulations: Please read these instructions completely before using the equipment. Keep these instructions on to hand. The device may only be operated by trained specialist staff.

#### Installation:

- 1) The device is designed for devices and systems that meet the standard requirements for hazardous voltages, power, and fire prevention.
- 2.) Installation and service only by trained specialists. The AC power must be switched off. The work is to be labelled; accidental reconnection of the system must be prevented.
- 3.) Opening the device, its modification, loosening bolts, or operation outside the specified herein specification or in an unsuitable environment, has the immediate loss of warranty to follow. We disclaim any responsibility for any resulting damage to persons or things.
- 4.) Note: The device must not be operated without an upstream circuit breaker (CB). We recommend the use of B-Type 16A. It is prohibited to use the unit without PE. It may be necessary upstream device has a power switch.

#### Warning:

Non-compliance these warnings can result in fire and serious injury or death.

- 1. Never operate device without PE connection.
- 2. Before connecting the device to the AC network, make wires free of voltage and ensure that it cannot accidentally switch on.
- 3. Allow neat and professional cabling.
- 4. Never open nor try to repair the unit. Inside are dangerous voltages that can cause electrical shock hazard.
- 5. Avoid metal pieces or other conductive material to fall into the item.
- 6. Do not operate the device in damp or wet conditions.
- 7. Do not operate the unit under EX-conditions.



All parameters after 15 minutes of continuous operation at full load / 25°C / 230Vac 50/60Hz, unless otherwise indicated.